

INDEX

CHAPTER 1 RECEIVING AND INSPECTION

1-1 Nameplate Information	1-1
1-2 Model Explanation.....	1-1
1-3 Serial Number Explanation.....	1-1

CHAPTER 2 STORAGE AND INSTALLATION

2-1 Storage.....	2-1
2-2 Installation	2-1
2-3 Installation Environment.....	2-2
2-4 Dimensions.....	2-3
2-5 Digital keypad installation.....	2-7

CHAPTER 3 WIRING

3-1 Basic Wiring Diagram.....	3-1
3-2 Main Circuit Terminal Explanations.....	3-2
3-3 Control Terminal Explanations.....	3-2
3-4 Component Explanations.....	3-4
3-5 Wiring Notices	3-5

CHAPTER 4 DIGITAL KEYPAD (PU-01) OPERATION

4-1 Description of the Digital Keypad PU-01	4-1
4-2 Explanations of Display Messages.....	4-1
4-3 Operation steps.....	4-2

CHAPTER 5 PARAMETER SETTINGS

5-1 Group 0: System Parameter.....	5-1
5-2 Group 1: Basic Parameter.....	5-13
5-3 Group 2: Digital Output/Input Parameters.....	5-18
5-4 Group 3: Analog Output/Input Parameters.....	5-28
5-5 Group 4: Multi-Step Speed Run (MSS Run) and Process Control Run (PLC Run).....	5-34
5-6 Group 5: Motor and Protection Parameter	5-37
5-7 Group 6: Special Parameters.....	5-44
5-8 Group 7: High Performances and Communication Parameter.....	5-49
5-9 Group 8: Control Parameters for Fan and Water Pump	5-60
5-10 Group 9: Speed Feedback Parameter	5-63

CHAPTER 6 FUNCTIONS AND PARAMETER SUMMARY.....6-1

CHAPTER 7 ERROR MESSAGE AND TROUBLESHOOTING.....7-1

CHAPTER 8 STANDARD SPECIFICATIONS

8-1

CHAPTER 9 BRAKING RESISTORS AND BRAKING UNITS

9-1